

Model 3000 series Cardiac Trigger Monitor



P/N 2718-04-16

Operation Manual

User Responsibility

This product will perform in conformity with the description thereof contained in this Operation Manual and accompanying labels and/or inserts, when assembled, operated, maintained and repaired in accordance with the instructions provided. This product must be checked periodically. A defective Product should not be used. Parts that are broken, missing, plainly worn, distorted or contaminated should be replaced immediately. Should such repair or replacement become necessary, IVY Biomedical Systems, Inc. recommends that a telephone call or written request for service advice be made to IVY Biomedical Systems, Inc. Service Department. This product or any of its parts should not be repaired other than in accordance with instructions provided by IVY Biomedical Systems, Inc. trained personnel. The product must not be altered without the prior written approval of IVY Biomedical Systems, Inc. Quality Assurance Department. The user of this Product shall have the sole responsibility for any malfunction, which results from improper use, faulty maintenance, improper repair, damage or alteration by anyone other than IVY Biomedical Systems, Inc.

CAUTION: US Federal law restricts this device to sale by or on the order of a licensed medical practitioner.

Ivy Biomedical Systems, Inc. has declared that this product conforms with the European Council Directive 93/42/EEC Medical Device Directive when its used in accordance with the instructions provided in the Operation and Maintenance Manual.



Ivy Biomedical Systems, Inc.

11 Business Park Drive

Branford, Connecticut 06405. USA

(203) 481-4183 • (800) 247-4614 • FAX (203) 481-8734

www.ivybiomedical.com e-mail: ivybio@ivybiomedical.com

This page is intentionally left blank.

Declaration of Conformity

Manufacturer: Ivy Biomedical Systems, Inc.
11 Business Park Drive
Branford, CT 06405

Authorized Representative: Cavendish Scott Ltd.
SG5 1FW, England

Type of Equipment: Physiological Monitors

Models: 3000 (Series) and Accessories

We, Ivy Biomedical Systems, Inc., hereby declare that the devices mentioned above comply with the Swedish National Board of Health and Welfare Regulation and guidelines on medical devices LVFS 2003:11 (M) 28 October 1994 – transposing European Medical Devices Directive 93/42/EEC.

Date of Validity: April 1st, 2006

Classification: IIB According to rule No. 10

Conformity Assessment
Procedure: Annex II

Notified Body: Intertek SEMKO AB Notified Body No. 0413

Name of Authorized Signatory: Dick Listro
Position held in Company: Director of Regulatory

Signature



This page is intentionally left blank.

Table of Contents

WARRANTY	iii
INTRODUCTION	1
SAFETY	2
Electrical.....	2
Explosion	2
Patient Connections.....	3
MRI.....	3
Pacemakers	3
Electrosurgery Protection.....	3
Defibrillation Protection	3
EMC.....	3
Electromagnetic Compatibility IEC 60601-1-2:2001	3
Description of Warning Labels	8
MONITOR DESCRIPTION	9
Classification.....	9
Control and Indicators.....	10
Basic Keys.....	10
Programmable Keys	10
Menu Structure (with Polarity Control and Simulator option).....	11
Menu Structure (without Polarity Control and Simulator option).....	12
Display	13
Alarms	14
Rear Panel	14
Fuse Ratings	15
MONITOR SETUP	16
Set up the instrument for operation.....	16
Change Mains Voltage	16
Set the Language	16
Set Time, Date, and Audio	16
Trace Speed.....	17
Default Settings.....	17
ALARM MESSAGES	18
ECG MONITORING.....	19
Safety Considerations.....	19
Patient Connections.....	20
ECG Waveform Amplitude (Size).....	20
Lead Selection	21
AC Power Filter	22
ECG Filter	22
Alarm Limits.....	23
Pacemaker	23

Table of Contents

RECORDER OPERATION	24
Changing Paper	24
Recorder Modes	25
Recorder Speed	26
Example Printout	26
 SYNCHRONIZED OUTPUT (TRIGGER)	27
The Synch Pulse	27
Trigger-Mark Display	27
Polarity Control Option	28
 MONITOR TESTING	29
ECG Simulator (Optional)	29
 MAINTENANCE AND CLEANING	30
Monitor	30
Patient Cables	30
Preventive Maintenance	30
 ACCESSORIES	31
ECG	31
Disposal	31
 SPECIFICATIONS	32

WARRANTY

All products manufactured by Ivy Biomedical Systems, Inc. under normal use, are warranted to be free from defects in material and workmanship and to operate within published specifications, for a period of one year from date of original shipment.

All accessories such as patient cables and lead wires, supplied by Ivy Biomedical Systems, Inc. under normal use, are warranted to be free from defects in material and workmanship and to operate within published specifications, for a period of 90 days from date of original shipment.

If an examination by Ivy Biomedical Systems, Inc. discloses such product(s) or component part(s) to have been defective, then Ivy's obligation is limited at Ivy's option, to repair or replacement.

When a product or products need to be returned to the manufacturer for repair or examination, contact customer service personnel at Ivy Biomedical Systems, to obtain a Return Material Authorization number (RMA #) and the correct packing instructions:

Customer Service

Telephone: (203) 481-4183 or (800) 247-4614.

Fax: (203) 481-8734.

E-mail: ivybio@ivybiomedical.com

All products being returned for warranty repair shall be shipped prepaid to:

Service Department

Ivy Biomedical Systems, Inc.

11 Business Park Drive.

Branford, CT. 06405. USA.

Ivy will prepay the shipment of the repaired or replacement product to customer at Ivy's expense.

WARRANTY

This page is intentionally left blank.

INTRODUCTION

This manual is to provide information on the correct use of the Model 3000 Cardiac Trigger Monitor. It is up to the user to ensure that any applicable regulations regarding the installation and operation of the monitor are observed.

The model 3000 is Medical Electrical Equipment intended to monitor patients under medical supervision. The model 3000 must be operated by trained and qualified medical personnel only.

Using This Manual

We recommend that you read this manual before operating the equipment. This manual is written to include all options. If your monitor does not include all options, menu selections and display data for those options will not appear on your monitor.

Use the Monitor Description section for general descriptions of controls and displays. For details on the use of each option, refer to the section of the manual dealing with the appropriate option.

Boldface type is used in text to refer to the labeling on user controls. Special brackets [] surround menu selections used with the programmable keys.

Manufacturer's Responsibility

The manufacturer of this equipment is responsible for the effects on safety, reliability, and performance of the equipment only if:

- Assembly operations, extensions, re-adjustments, or repairs are carried out by persons authorized by the manufacturer
- The electrical installation complies with all applicable regulations
- The equipment is used in accordance with the instructions in this manual

Incorrect operation or failure of the user to maintain the monitor in accordance with proper maintenance procedures relieves the manufacturer or his agent from all responsibility for consequent non-compliance, damage, or injury.

Ivy Biomedical Systems, Inc.

11 Business Park Drive
Branford, Connecticut 06405
(203) 481-4183 or (800) 247-4614
fax (203) 481-8734
e-mail: techline@ivybiomedical.com

This manual explains how to set up and use the Model 3000. Important safety information is located throughout the manual where appropriate. **READ THE ENTIRE SAFETY INFORMATION SECTION BEFORE YOU OPERATE THE MONITOR.**

SAFETY



Electrical

This product is intended to be operated from a mains power source of nominally 100 to 230V~, 47 to 63 Hz and Maximum AC Power consumption: 35VA.

WARNING: Before this monitor is plugged into any power source verify visually that the line selector switch on the rear panel displays the appropriate voltage range for your location.

WARNING: To prevent electrical hazards to all personnel, this monitor must be properly grounded. Connect the monitor only to a three-wire, grounded, hospital grade receptacle. The three-conductor plug must be inserted into a properly wired three-wire receptacle; if a three-wire receptacle is not available, a qualified electrician must install one in accordance with the governing electric code.

WARNING: Do not under any circumstances remove grounding conductor from the power plug.

WARNING: The power cable supplied with this equipment provides for this protection. Do not attempt to defeat this protection by modifying the cable or by using ungrounded adapters or extension cables. The power cord and plug must be intact and undamaged. To disconnect the equipment from the mains power unplug the power cord.

WARNING: Do not connect to an electrical outlet controlled by a wall switch or dimmer.

WARNING: If there is any doubt about the integrity of the protective ground conductor arrangement, do not operate the monitor until the AC power source protective conductor is fully functional.

WARNING: Do not place the monitor in any position that may cause it to fall on the patient. Do not lift the monitor by the power supply cord or patient cable.

WARNING: Electric shock hazard! Do not remove covers or panels. Refer service to qualified service personnel.

WARNING: To avoid electrical shock, disconnect the monitor from its power source before changing fuses. Replace fuses only with same type and rating T.5A, 250V (Metric 5x20mm).

WARNING: Do not clean monitor while it is on and/or plugged into a power source.

WARNING: If unit is accidentally wet, discontinue use until dry and then test unit for proper operation before reuse on a patient.

WARNING: This unit uses a common isolation path for the ECG leads. Do not connect any non-isolated accessories to the ECG input when connected to a patient, as this may compromise the safety of the unit. When attached to other devices, insure that the total chassis leakage currents of all units do not exceed 300 μ A.

Explosion

DANGER: Explosion hazard! Do not use this equipment in the presence of flammable anesthetics or other flammable substance in combination with air, oxygen-enriched environment or nitrous oxide.

Patient Connections

Patient connections are electrically isolated. For all connections use isolated probes. Don't let patient connections contact other conductive parts, including ground. See instructions for patient connections in this manual.

Carefully route patient cables to reduce the possibility of patient entanglement or strangulation.

Leakage current is limited internally by this monitor to less than 10 μ A. However, always consider cumulative leakage current that can be caused by other equipment used on the patient at the same time as this monitor.

To ensure that the leakage current protection remains within the specifications, use only the patient cables specified in this manual. This monitor is supplied with protected lead wires. *Do not use* cables and leads with unprotected lead wires having exposed conductors at the cable end. Unprotected lead wires and cables may pose an unreasonable risk of adverse health consequences or death.

Line isolation monitor transients may resemble actual cardiac waveforms and thus inhibit heart rate alarms. To minimize this problem, ensure proper electrode placement and cable arrangement.

If an alarm condition occurs while the alarms are set to off, neither visual or audio alarms will be present.

MRI

The model 3000 should not be used within the magnetic field during Magnetic Resonance Imaging.

Pacemakers

Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely on rate meter alarms. *Keep pacemaker patients under close surveillance.*

Electrosurgery Protection

This equipment is protected against electrosurgery potentials. To avoid the potential of electrosurgery burns at monitoring sites, ensure proper connection of the electrosurgery return circuit as described by the manufacturer's instructions. If improperly connected, some electrosurgery units might allow energy to return through the ECG electrodes.

Defibrillation Protection

This equipment is protected against 360 J defibrillator discharge.. The monitor is internally protected to limit current through the electrodes to prevent injury to the patient and damage to the equipment as long as the defibrillator is used in conformance with the manufacturer's instructions.

EMC

This equipment has been certified to be protected to emissions and immunity according to IEC-60601-1-2.

Electromagnetic Compatibility IEC 60601-1-2:2001

CAUTION: Medical Equipment needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided in the Operation Manual.

CAUTION: Portable and mobile RF communications equipment can affect medical electrical equipment.

WARNING: The model 3000 should not be used adjacent to or stacked with other equipment and that if adjacent or stacked use is necessary, the Model 3000 should be observed to verify normal operation in the configuration in which it will be used.

Accessories

WARNING: The use of accessories other than those specified below may result in increased emissions or decreased immunity of the equipment.

Part Number	Description
--------------------	--------------------

590161	Three lead patient cable
590162	Set of three lead wires
590317	Low noise three lead patient cable
590318	Set of three radiotranslucent lead wires
590323	Low noise three lead patient cable with 1kohm resistors.

The minimum amplitude or value patient physiological signal is 0.5 mV (AAMI EC-13 3.2.6.1).

WARNING: The use of the Model 3000 below the following amplitude values may cause inaccurate results:

Minimum amplitude of patient physiological signal depending upon the type of patient cable.	
Patient cable part number	Minimum amplitude
590161	1.5 mV
590317	0.5 mV
590323	0.5 mV

Guidance and manufacturer's declaration – Electromagnetic emissions		
The Model 3000 is intended for use in the electromagnetic environment specified below. The customer or the user of the Model 3000 should assure that it is used in such an environment.		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The Model 3000 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment. The Model 3000 is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
RF emissions CISPR 11	Class A	
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations/ flicker emissions IEC 61000-3-3	Complies	

Guidance and manufacturer's declaration – Electromagnetic immunity			
The Model 3000 is intended for use in the electromagnetic environment specified below. The customer or the user of the Model 3000 should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment – guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8kV air	±6 kV contact ±8kV air	Floors should be wood, concrete, or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast Transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±1.5 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions, and voltage variations on power supply input lines IEC61000-4-11	<5 % U_T (>95 % dip in U_T) for 0.5 cycle 40 % U_T (60 % dip in U_T) for 5 cycles 70 % U_T (30 % dip in U_T) for 25 cycles <5 % U_T (>95 % dip in U_T) for 5 sec cycle	<5 % U_T (>95 % dip in U_T) for 0.5 cycle 40 % U_T (60 % dip in U_T) for 5 cycles 70 % U_T (30 % dip in U_T) for 25 cycles	Mains power quality should be that of a typical commercial or hospital environment. If the user of the Model 3000 requires continued operation during power mains interruptions, it is recommended that the Model 3000 be powered from an uninterruptible power supply.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	Not applicable	Not applicable

Guidance and manufacturer's declaration – Electromagnetic immunity			
The Model 3000 is intended for use in the electromagnetic environment specified below. The customer or the user of the Model 3000 should assure that it is used in such an environment.			
Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment – guidance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 Vrms	Portable and mobile RF communications equipment should be used no closer to any part of the Model 3000, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance $d = 1.2 \sqrt{p}$
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	$d = 1.2 \sqrt{p}$ 80 MHz to 800 MHz $d = 2.3 \sqrt{p}$ 800 MHz to 2.5 GHz Where p is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m). Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey ^a , should be less than the compliance level in each frequency range ^b Interference may occur in the vicinity of the equipment marked with the following symbol: 
NOTE 1 – At 80 MHz and 800 MHz, the higher frequency range applies. NOTE 2 – These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.			
^a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radios, AM and FM radio broadcast, and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the Model 3000 is used exceeds the applicable RF compliance level above, the Model 3000 should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as re-orienting or relocating the Model 3000. ^b Over the frequency range 150 KHz to 80 MHz, field strengths should be less than 3 V/m.			

Description of Warning Labels




Attention, consult ACCOMPANYING DOCUMENTS before attempting to change power supply selection or carry out interconnections. Equipment connected should comply with IEC-60601-1 or IEC-950 with configuration to IEC-60601-1-1.




Type CF applied part, Defibrillator proof.



Equipotential ground connector adjacent to this symbol.




Fuse type/rating.



Output signal.



ON



Input signal.




Stand By (STBY)



Alternate Current (AC)



Protective earth (ground)



Input/Output signal



WEEE Compliance

MONITOR DESCRIPTION

The Model 3000 series Cardiac Trigger Monitor is an easy to use color monitor that displays a patient's ECG waveform and heart rate. The ECG lead displayed can be selected from Leads I, II or III. In addition high and low heart rate alarm limits can be adjusted to bracket the patient's heart rate so that a violation of these limits produces an audible and visual indication of the violation. The color display has a single trace, large Heart Rate numbers and alphanumeric characters for other data, alarm messages, menus and user information.

The Model 3000 monitor is intended primarily for use on patients in applications requiring precision R-wave synchronization such as timed imaging studies.

An optional integral recorder is available, set up of recorder functions are made through the monitor menus

The Model 3000 series are available with different options; not all options are included in all monitors.

The Model 3000 is suitable for use in presence of Electro-surgery.

The Model 3000 is not intended for use with any other physiological monitoring unit.

The Model 3000 is restricted to use on one patient at a time.

The Model 3000 is not intended for home-care patient monitoring

Classification (in accordance with IEC-60601-1)

Protection against electric shock:	Class 1.
Degree of protection against electric shock:	Type CF applied part. Defibrillator proof: ECG
Degree of protection against harmful ingress of water:	Ordinary equipment IPX0 per IEC-60529
Methods of Maintenance and Cleaning:	See page 30
Degree of safety of application in the presence of a flammable anesthetic mixture with air or with oxygen or nitrous oxide:	Equipment not suitable for use in the presence of a flammable anesthetic mixture
Mode of operation:	Continuous

MONITOR DESCRIPTION

Controls and Indicators

Basic Keys




When the monitor is plugged into an AC power source the **ON** switch, when pressed, provides power to the monitor's electronic circuits.



The **STBY** switch, when pressed, disconnects power from the monitor's electronic circuits.
NOTE: To disconnect the monitor from the main power unplug the AC power cord.




Disables the audible and visual alarms for a two-minute period to allow the operator perform procedures that would otherwise set off the alarms. This avoids the problem of turning off the alarms and forgetting to turn them back on. Press this key again to return the alarms to normal before the two minutes have expired. Pressing **ALARM PAUSE** key for 3 seconds will turn alarms off. Press **ALARMS PAUSE** key again to reactivate the alarms. Pressing **ALARM PAUSE** key will pause the alarms for 120 seconds (2 minutes).

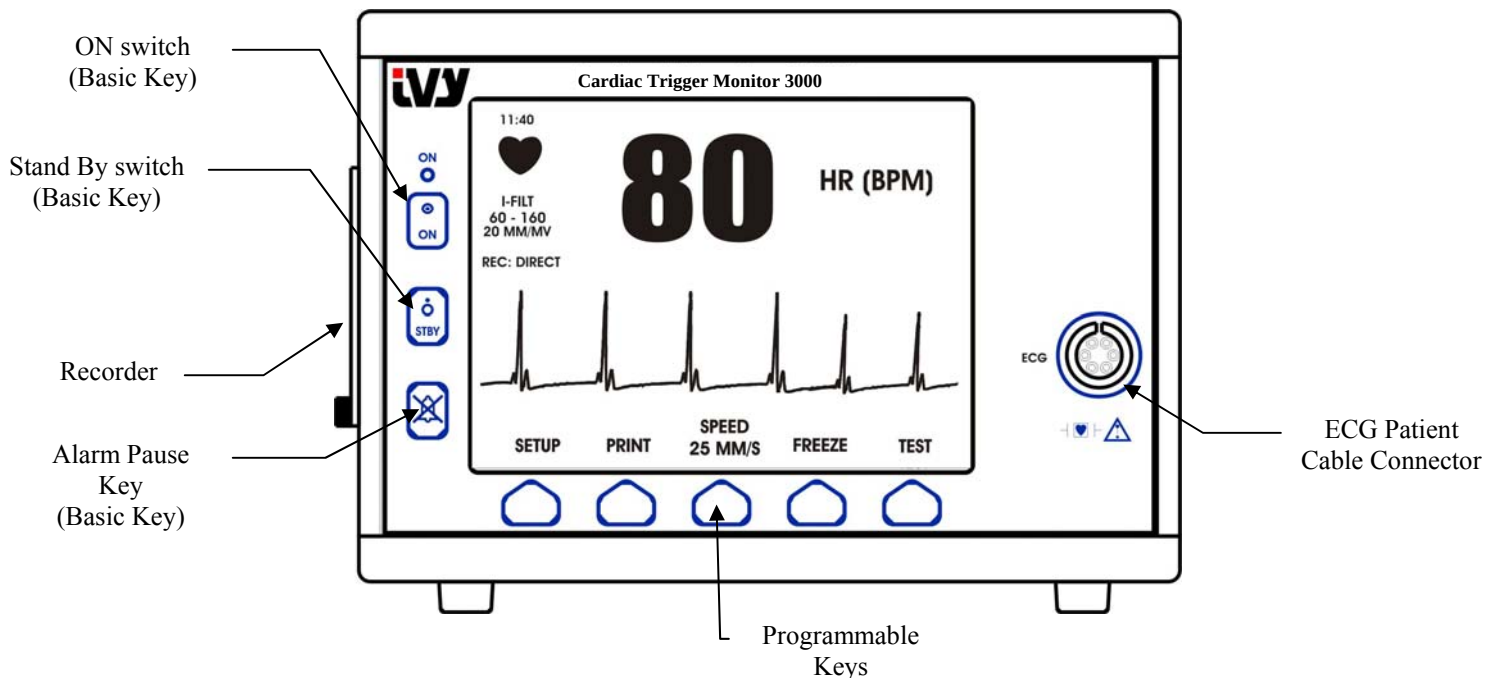


Programmable Keys

Displayed above each programmable key is either a menu item or a function. Pressing a programmable key will display other menu levels or activate an appropriate function. Menu functions are described in the Menu Structure section of this manual.

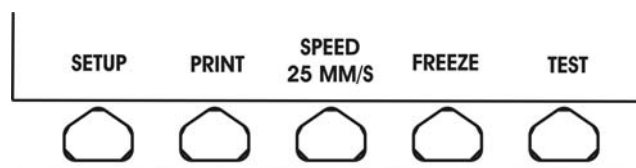

MENU STRUCTURE (with Trigger Polarity control)

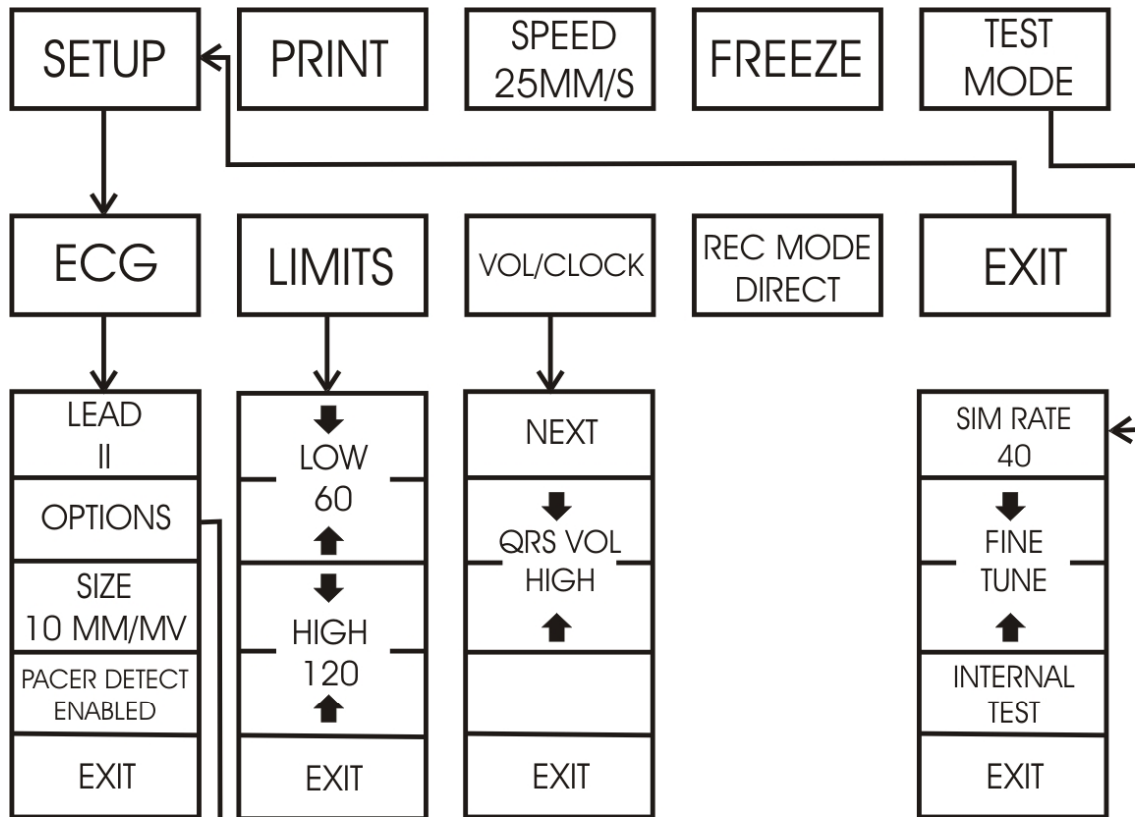

KEY SELECTIONS

ECG Menu

Lead: I - II - III
 SIZE: 5, 10, 20, and 40mm/mv
 PACER DETECT: ENABLED and DISABLED
 OPTIONS MENU:
 POWER FILTER: ON and OFF
 TRIGGER: Positive and Negative

Limits Menu

Low: 10 to 245 bpm
 High: 15 to 250 bpm

Test Mode Menu

Sim Rate: OFF, 40, 60, 90, 120, and 150
 Fine Tune: 40 to 150 bpm

Speed Key:

25 and 50mm/s

Vol/Clock Menu


NEXT KEY
 QRS Vol: OFF, High, and Low
 Alarm Vol: High and Low
 Month
 Day
 Year
 Hour
 Minute

Rec Mode Key:

Direct, Delay, and Timed.

MONITOR DESCRIPTION

MENU STRUCTURE (without Trigger Polarity Control)

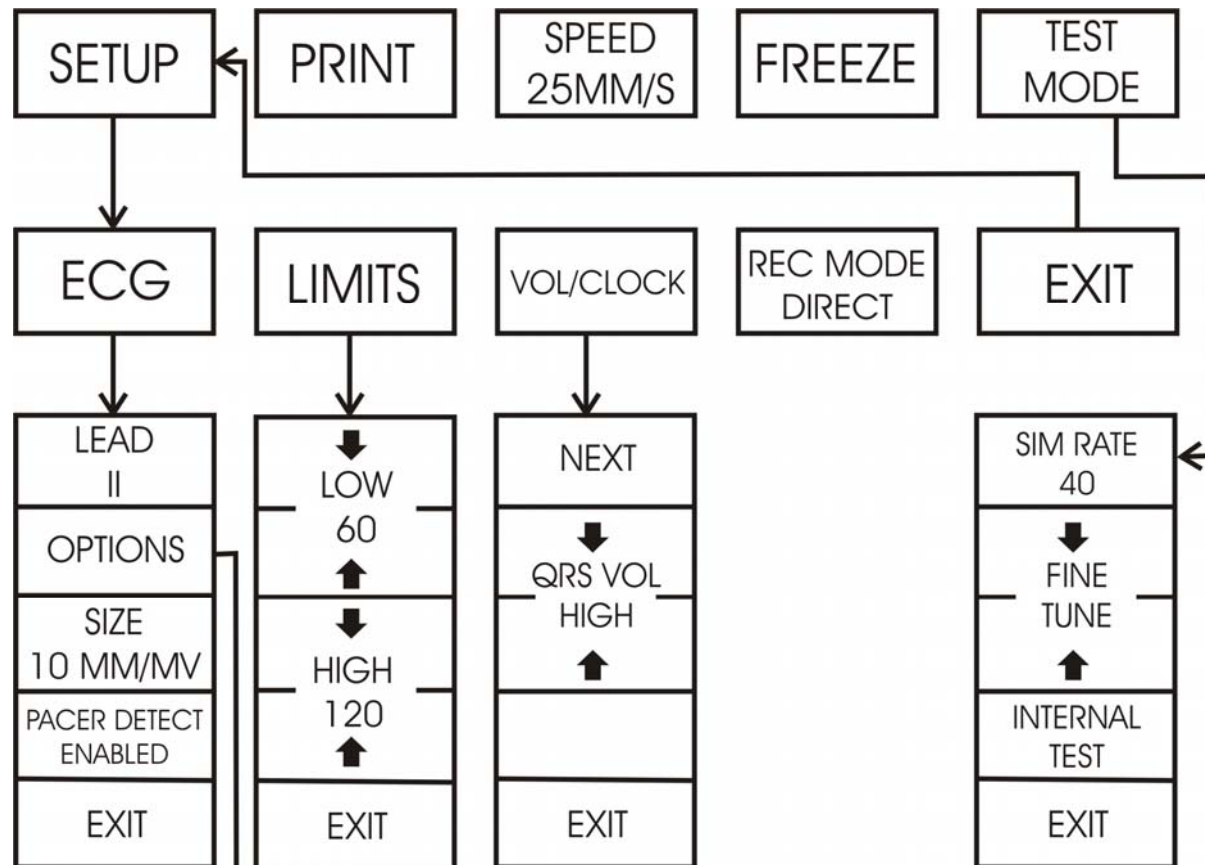

KEY SELECTIONS

ECG Menu

Lead: I - II - III
SIZE: 5, 10, 20, and 40mm/mv
PACER DETECT: ENABLED and DISABLED
OPTIONS MENU:
POWER FILTER: ON and OFF
ECG FILTER: ON and off

Limits Menu

Low: 10 to 245 bpm
High: 15 to 250 bpm

Test Mode Menu

Sim Rate: OFF, 40, 60, 90, 120, and 150
Fine Tune: 40 to 150 bpm

Speed Key:

25 and 50mm/s

Vol/Clock Menu

NEXT KEY

QRS Vol: OFF, High, and Low
Alarm Vol: High and Low
Month
Day
Year
Hour
Minute

Rec Mode Key:


Direct, Delay, and Timed.

Display


HEART RATE: Displayed in beats per minute (bpm) on the upper part of the screen.

SETUP: Selections made in the menu setup modes (alarm limits, lead selection, and filter on/off) are displayed in small characters at the upper left corner.

ECG: Trace is displayed across the screen moving from left to right.

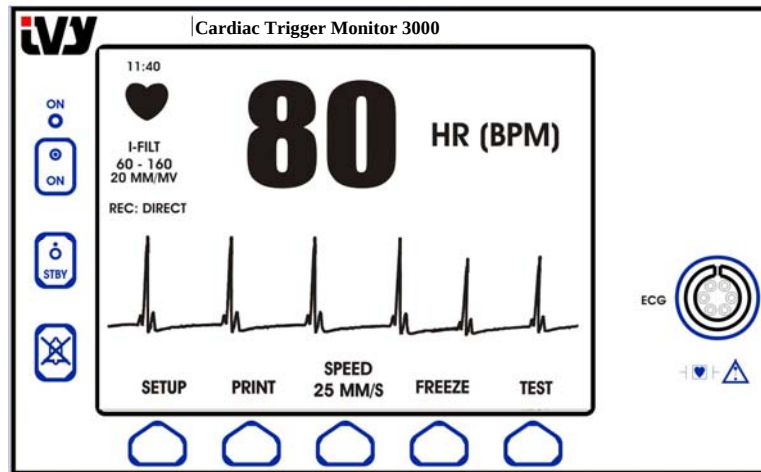

Normal Display Mode

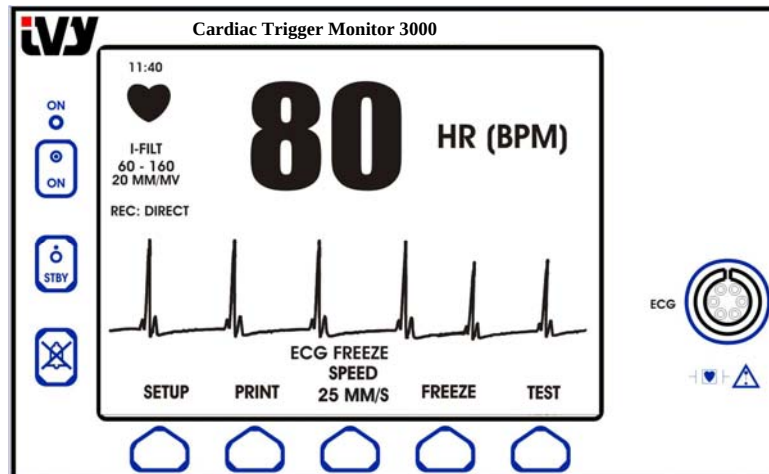

Freeze Display Mode

MONITOR DESCRIPTION

ALARMS: The following alarm indications are displayed in reverse video. Alarm indications appear on the center of the screen and flash once per second. ALARMS PAUSE message (PAUSE) is also displayed on the center of the screen and is displayed in red text.

<i>ALARMS OFF:</i>	The audible and visual alarms have been turned off.
<i>LEAD OFF:</i>	A lead has become disconnected. This alarm cannot be reset with the ALARM PAUSE key.
<i>HR HIGH:</i>	The high heart rate limit has been exceeded for four seconds.
<i>HR LOW:</i>	The low heart rate limit has been exceeded for four seconds.
<i>ASYSTOLE:</i>	The interval between heartbeats has exceeded six seconds.
<i>PAUSE:</i>	The alarms are paused for 120 seconds.

WARNING: The monitor always powers on with the ALARMS paused for 30 seconds and then they are set to ON.

Rear Panel

The following are located on the rear panel.

POWER INPUT: A receptacle for a standard ac power cord.

NOTE: When the monitor is connected to another piece of equipment, always make sure that each piece of connected equipment has its own separate ground connection.

Do not attempt to connect cables to these connectors without contacting your Biomedical Engineering Department. This is to ensure the connection complies with leakage current requirements of one of the following applicable standards: UL2601-1, CAN/CSA C22.2 No 601.1-M90, IEC 60601-2-25, and CE-MDD 93/42/ECC. The maximum non-destructive voltage that may be applied to these connectors is 5V.

SYNCHRONIZED OUTPUT: A BNC type connector for the output of the synch pulse indicating the timing of the peak of the R-wave. Limit to 100Hz bandwidth.

PEQ GROUND: Potential Equalization - A ground connection that can be used to ensure that no potential differences can develop between this equipment and other electrical equipment.

FUSE: Replace only with the same type and rating of fuse as indicated on the fuse rating label T.5A 250V (Metric 5x20mm).


ECG X1000 (ECG X500 for GEMS Nuclear Medicine applications only) and SYNCHRONIZED OUTPUT: This is a ¼ stereo phone jack with an ECG analog waveform output on the tip, synch output on the ring, and common on the sleeve. Limit to 100Hz bandwidth.

AUXILIARY: A digital interface for device communication. This auxiliary output provides 5V and -8V with a maximum current of 20mA.

LINE VOLTAGE SELECTOR: Switch to select the input voltage range of the device (100 to 230V~, 47 to 63 Hz.).

The use of ACCESSORY equipment not complying with the equivalent safety requirements of this equipment may lead to a reduce level of safety of the resulting system. Consideration relating to the choice shall include:

- Use of the accessory in the PATIENT VICINITY
- Evidence that the safety certification of the ACCESSORY has been performed in accordance to the appropriate IEC 60601-1 and / or IEC 60601-1-1 harmonized national standard.

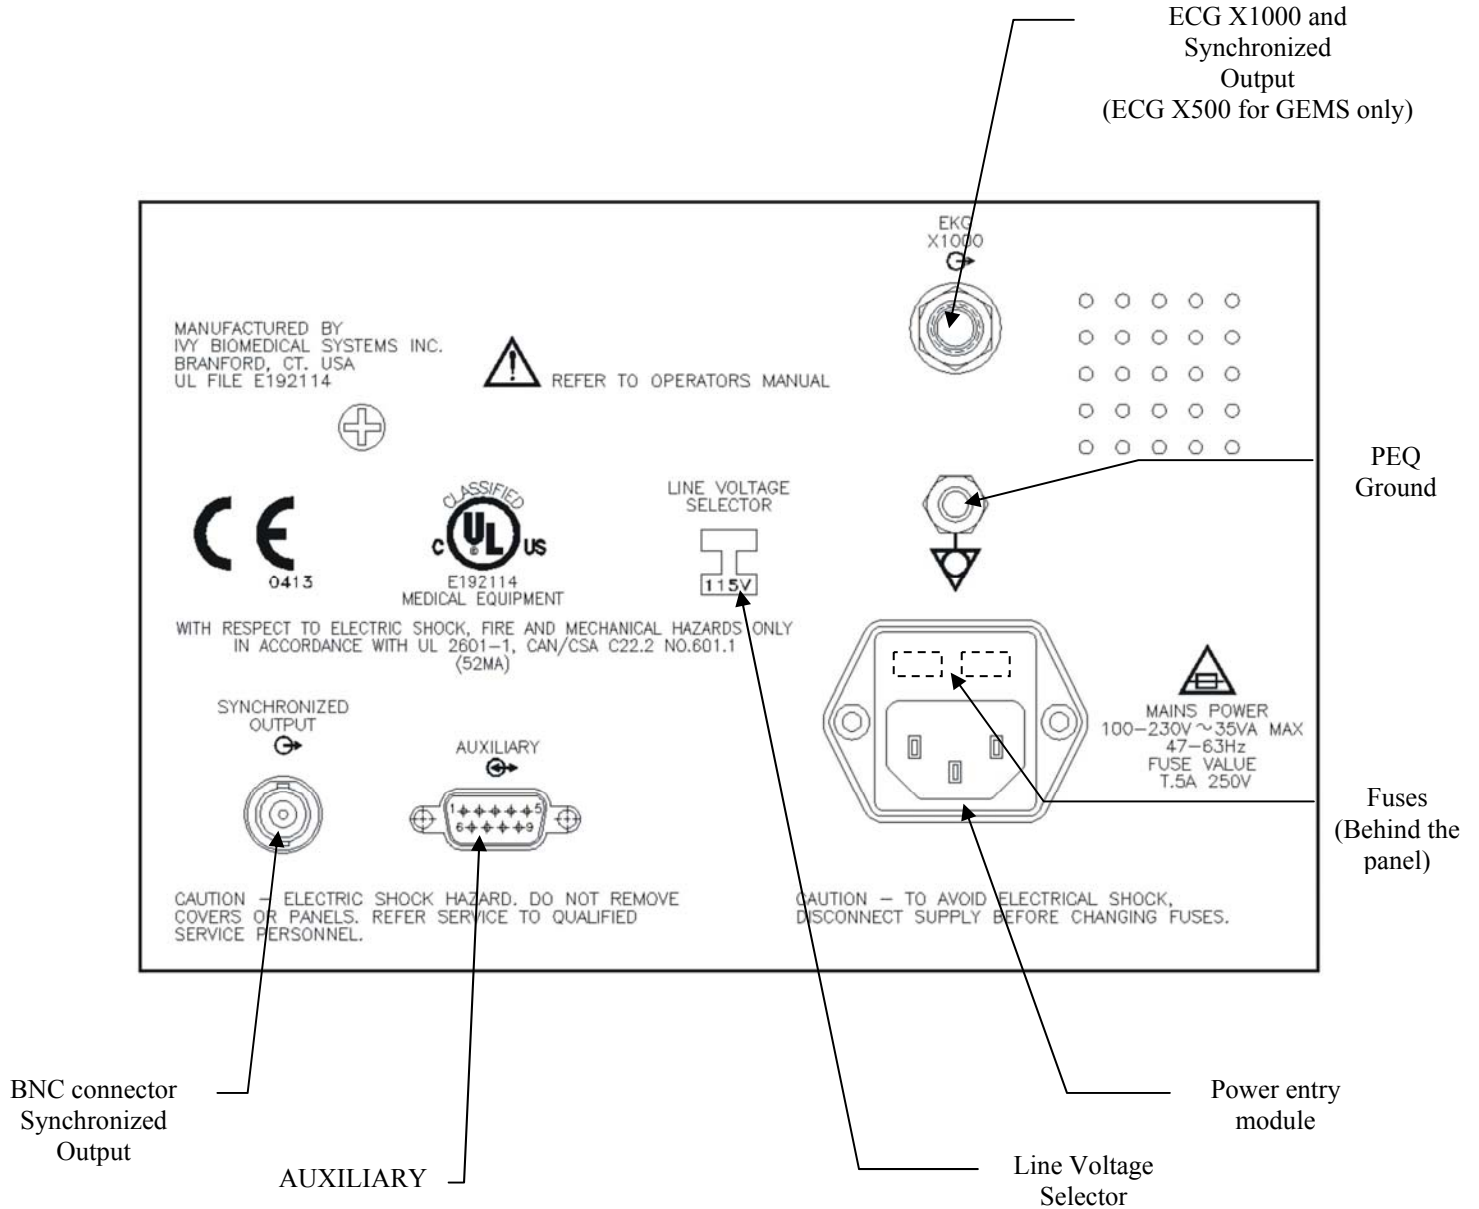

Fuse Ratings

The fuses are located behind the cover of the power entry module. To replace the fuses, remove the cover and replace them only with same type and rating T.5A, 250V (Metric 5x20mm).

MONITOR SETUP

MONITOR SETUP

To Setup the Instrument for operation

WARNING: Before this monitor is plugged into any power source verify visually that the line selector switch on the rear panel displays the appropriate voltage range for your location. For further instructions see “To change mains voltage” below.

1. Plug the ac line cord into a power source providing the proper voltage.
2. Press the **ON** switch at the left side of the front panel to turn power on.
3. Connect the patient cable to the ECG connector on the front panel.

To Change Mains Voltage

1. Verify that the power cord is disconnected.
2. Locate the line voltage selector switch on the monitor rear panel.
3. If necessary move the selector switch to the appropriate voltage for your location (for assistance contact your Maintenance Department).

To set the Language

Use the following procedure to change the language of the menu and messages.

1. Turn monitor off by pressing the STBY key.
2. Press and hold the fourth and fifth soft key (from left to right) while applying power to the monitor by pushing the ON key.
3. Press the [LANGUAGE] key to set the desire language. The language choices are: English, Spanish, French, German, Italian, Portuguese, and Swedish.
4. Turn monitor off by pressing the STBY key.

To Set the Time, Date and Audio

Use the following procedure to set the date and time. The time is indicated in the upper left corner of the display.

1. Press the [SETUP] key in the main menu.
2. Press the [VOL/CLOCK] key to access the Vol/Clock menu.
3. The first setting is for QRS VOL. Use the  and  keys to increase or decrease the QRS VOL setting.
4. Press [NEXT] to move to the ALARM VOL setting. Use the  and  keys to increase or decrease the ALARM VOL setting.
5. Press [NEXT] to move to the MONTH setting. Use the  and  keys to increase or decrease the month setting.
6. Press [NEXT] to move to the DAY setting. Use the  and  keys to increase or decrease the day setting.
7. Press [NEXT] to move to the YEAR setting. Use the  and  keys to increase or decrease the year setting.
8. Press [NEXT] to move to the HOUR setting. Use the  and  keys to increase or decrease the hour setting.
9. Press [NEXT] to move to the MINUTE setting. Use the  and  keys to increase or decrease the minute setting.

When all date, clock and audio settings are correct, select [EXIT] to enter the settings into the monitor's memory.

To set the Trace Speed

Use the following procedure to change the trace speed.

1. Press the [SPEED] key in the main menu to select the trace speed. Selections are 25, and 50 mm/s.

NOTE: The [SPEED] key also changes the speed of the recorder.

Default Settings

To reset the monitor to the default settings, turn monitor off by pressing the STBY key; then press and hold the fourth and fifth soft key (from left to right) while applying power to the monitor by pushing the ON key.

Setting	Initial Default
ECG Size	10mm/mv
Lead	II
AC Filter	ON
Pacer Detection	ON
Trigger*	Positive
Heart Rate Low Limit	60
Heart Rate High Limit	120
Speed	25mm/sec
Recorder	Direct
QRS Vol.	OFF
Alarm Vol.	High
Alarms	OFF

Some settings (see list below) are stored in non-volatile memory which means that the monitor powers up with the same options that were in effect when power was last turned off.

Setting	Options		
Speed	25mm/sec	50mm/sec	
Recorder	Direct	Delay	Timed
Alarm Vol.	High	Low	
Trigger*	Positive	Negative	

*If the polarity control is not installed, the options for the Trigger pulse are only ON (Initial default) and OFF.

ALARM MESSAGES

ALARM MESSAGES

The following alarm message is displayed in reverse video of white letters on a red back ground.

ALARMS OFF :All audible and visual alarms have been turned off:

To turn all audible and visual **ALARMS ON** press  key once.

To turn all audible and visual **ALARMS OFF** press and hold  key for three seconds.

The following alarm messages are displayed in flashing reverse video. White letters on a red back ground flashing at a rate of once every second with an audio frequency of 4KHz.

Press  key to reset all alarms except **LEAD OFF**.

The following describes each of the alarm indications.

HR HIGH: The high heart rate alarm limit has been exceeded for four seconds.

HR LOW: The low heart rate alarm limit has been exceeded for four seconds.

ASYSTOLE: The interval between heartbeats has exceeded six seconds.

LEAD OFF: A lead has become disconnected or the electrode offset potential has exceeded ≥ 0.5 V

This alarm cannot be reset with the  key .

The following alarm message is displayed red letters:

PAUSE:All audible and visual alarms are turned off for 120 seconds.

To activate alarm **PAUSE** press  key once.

To cancel alarm **PAUSE** wait for 120 second **PAUSE** cycle to expire or press  key again.

WARNING: The monitor always powers on with the ALARMS paused for 30 seconds and then they are set to ON.

Low Signal Message

If the amplitude of the ECG signal is between 300 μ V and 500 μ V (3mm to 5mm at size 10mm/mv) for a period of eight seconds a LOW SIGNAL message will be displayed in yellow below the ECG waveform (see ECG monitoring section).

Pacer detection Message

The message "PACER DETECT DISABLED" will appear if the pacer detection circuit is disabled through the ECG menu.

ECG MONITORING

When ECG monitoring, the ECG waveform moves across the display. The heart rate, heart rate alarm limits, and lead selection are displayed in the upper left corner together with alarm messages. Also, a heart symbol flashes each time a heartbeat is detected.

Safety Considerations



Disposable products are intended for single-use only. Do not attempt to re-use these products.


ECG Patient connections are electrically isolated **Type CF** . For ECG connections use insulated probes. Don't let patient connections contact other conductive parts, including earth. See instructions for patient connections in this manual.

This monitor is supplied with protected lead wires. *Do not use* cables and leads with unprotected lead wires having exposed conductors at the cable end. Unprotected lead wires and cables may pose an unreasonable risk of adverse health consequences or death.

Leakage current is limited internally by this monitor to less than 10 μA . However, always consider cumulative leakage current that can be caused by other equipment used on the patient at the same time as this monitor.

To avoid the potential of electrosurgery burns at ECG monitoring sites, ensure proper connection of the electrosurgery return circuit as described by manufacturer's instructions. If improperly connected, some electrosurgery units might allow energy to return through the electrodes.

Line isolation monitor transients may resemble actual cardiac waveforms and thus inhibit heart rate alarms. To minimize this problem, ensure proper electrode placement and cable arrangement.

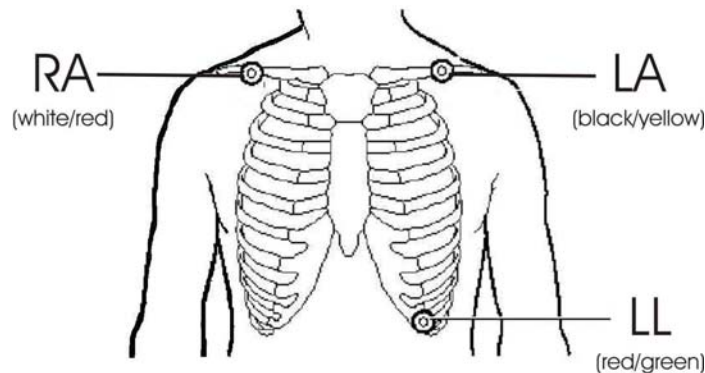

Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely on rate meter alarms. Keep pacemaker patients under close surveillance.

ECG MONITORING

Patient Connections

To ensure compliance with both safety and performance specifications, use the patient cables supplied by Ivy Biomedical Systems (see Accessories). Other cables might not produce reliable results.

Use only high quality pre gel silver/silver-chloride electrodes or equivalent.


Use the following procedure for ECG monitoring:

1. Before applying the electrodes, use Nuprep gel or a gauze pad to gently clean the area where the electrodes will be applied.
2. Connect the patient cable to the monitor's front panel **ECG** input.
3. Connect the leads to the patient cable.
4. Attach the leads to the electrodes.
5. Use the procedures described in the following sections for alarm limit settings, lead selection, amplitude adjustment, and enabling or disabling the filter. See the menu diagram below.


ECG Waveform Amplitude (Size)

Use the following procedure to adjust the amplitude (size) of the displayed ECG waveform.

1. Press the [SETUP] key from the main menu. The following menu appears.

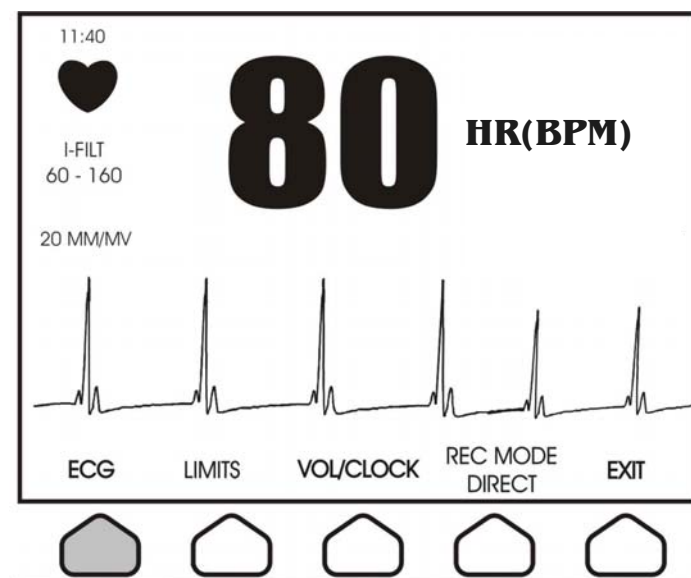

2. Press the first programmable key [ECG] once to select ECG.

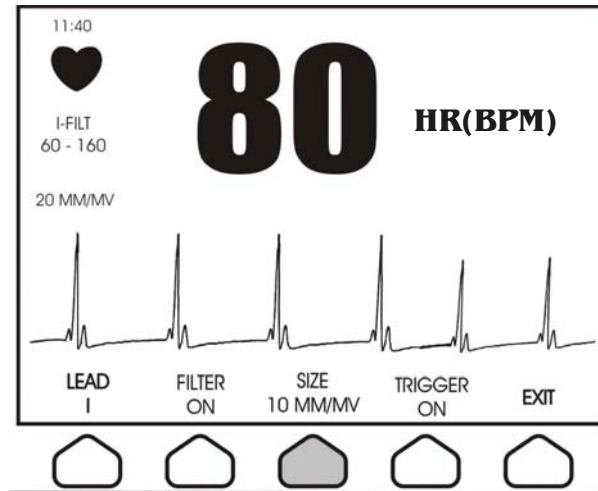

3. Use the third programmable key [SIZE] to adjust the ECG waveform amplitude.
4. Press [EXIT] to return to the main menu.

Low Signal Message


If the amplitude of the ECG signal is between $300\mu\text{V}$ and $500\mu\text{V}$ (3-5mm of amplitude at size 10mm/mv) for a period of eight seconds a LOW SIGNAL message will be displayed in yellow below the ECG waveform.

If the trigger function appears to be erratic while the message is displayed verify the following:

- Select lead with the highest amplitude, typically Lead II.
- The proper placement of the ECG electrodes. The ECG electrodes may need to be repositioned.
- The ECG electrodes still have conductive gel.

Lead Selection

1. Press the [SETUP] key from the main menu.
2. Press the first programmable key [ECG] once to select ECG.

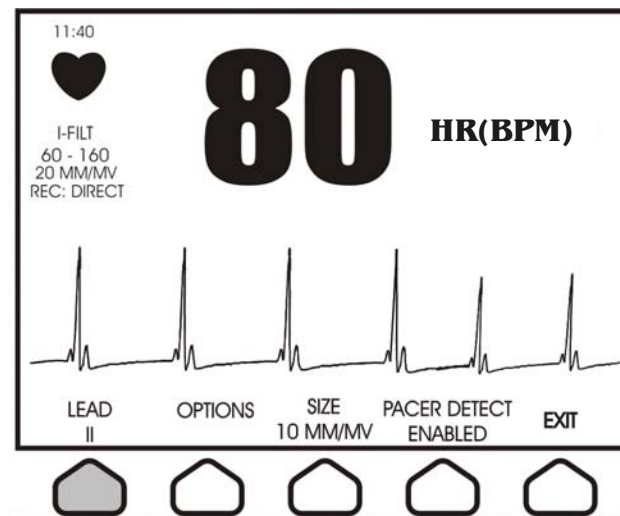


ECG MONITORING

3. Select [LEAD] to change the lead selection. The current lead selection is shown above the alarm limits in the upper left portion of the display. Available lead selections are Lead I, Lead II, or Lead III.
4. Press [EXIT] to return to the main menu.

AC Power Filter

Use the following procedure to activate the AC Power filter:

1. Press the [SETUP] key from the main menu.
2. Press the [ECG] key and select the [OPTIONS] key.
3. Select [POWER FILTER] to turn the filter on or off. When the filter is on an indication is shown in the upper left portion of the display. The filter sets the frequency response of the displayed waveform as follows:
Filtered: 0.2 to 25 Hz
Unfiltered: 0.2 to 45 Hz

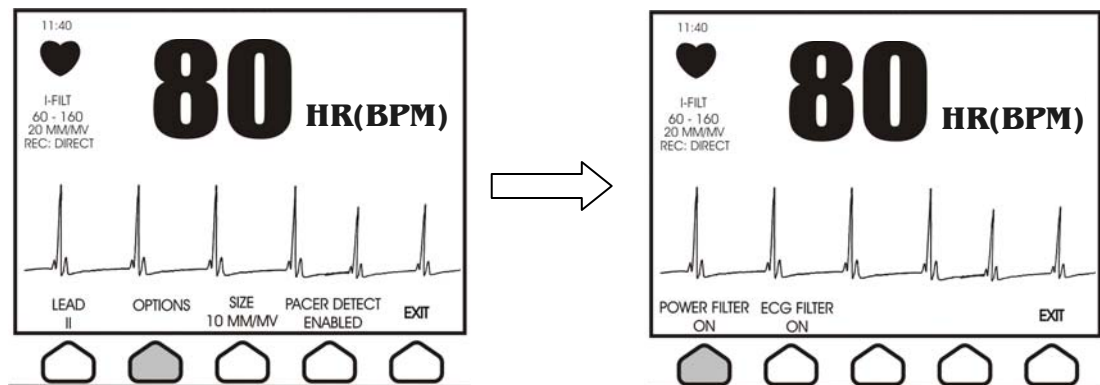

4. Press [EXIT] to return to the main menu.


ECG Filter

Use the following procedure to activate the ECG filter:

1. Press the [SETUP] key from the main menu.
2. Press the [ECG] key and select the [OPTIONS] key.
3. Select [ECG FILTER] to turn the filter on or off. When the filter is on an indication is shown in the upper left portion of the display. The filter sets the frequency response of the displayed waveform as follows:
Filtered: 1.5 to 40 Hz
4. Press [EXIT] to return to the main menu.

Alarm Limits

1. Press the [SETUP] key from the main menu. The following menu appears.

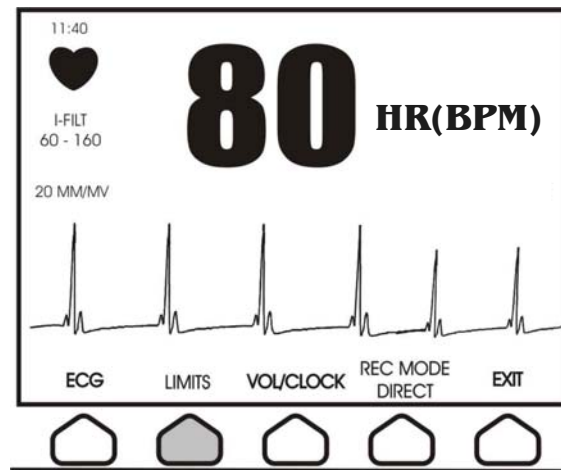

2. Press the programmable key [LIMITS] to enter the Alarm Limits menu.
3. Use the programmable keys to set the high and low heart rate limits.

↑	Increases high HR limit
↓	Decreases high HR limit
↑	Increases low HR limit
↓	Decreases low HR limit

Each time you press a key, the corresponding limit changes by 5 bpm. The current HR limits are always shown in the upper left portion of the display.

4. Press [EXIT] to return to the main menu.

Alarm Type	Default Limit
Heart Rate Low	60
Heart Rate High	120

Pacemaker

Follow the next procedure to activate or deactivate the pacemaker detection function:

1. Press the [SETUP] key from the main menu.
2. Press the [ECG] key and then select the [PACER DETECT] key to toggle between pacer detection enabled or disabled.

When a pacemaker has been detected, a **P** will start flashing in the heart symbol.
The message “PACER DETECT DISABLED” will appear if the pacer detection circuit is not active.

WARNING: Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely on heart rate alarms. *Keep pacemaker patients under close surveillance.*


RECORDER OPERATION

RECORDER OPERATION (Optional)

Changing Paper


Replace the roll of thermal paper as follows. (Recorder paper is Ivy P/N: 590035)

1. Press the paper eject button to open the door at the front of the recorder.

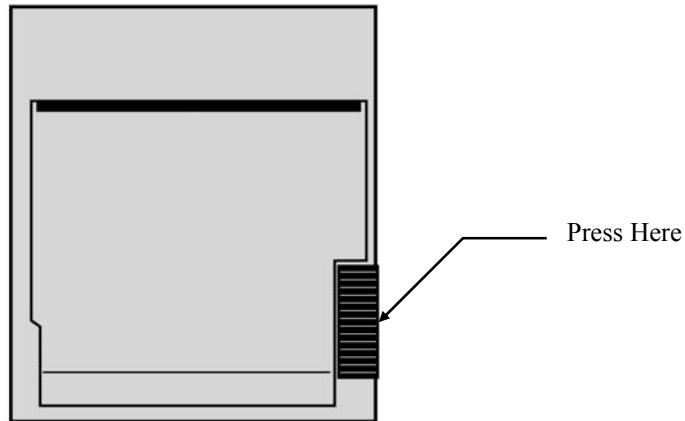


If the door does not open completely, pull it toward you until it is completely open.

2. Reach in and remove the spent paper core by pulling it gently toward you.
3. Place a new paper roll between the two round tabs of the paper holder.
4. Pull some paper from the roll. Make sure the sensitive (shiny) side of the paper faces the print head. The shiny side of the paper normally faces inside the roll.
5. Align the paper with the pinch roller on the door.

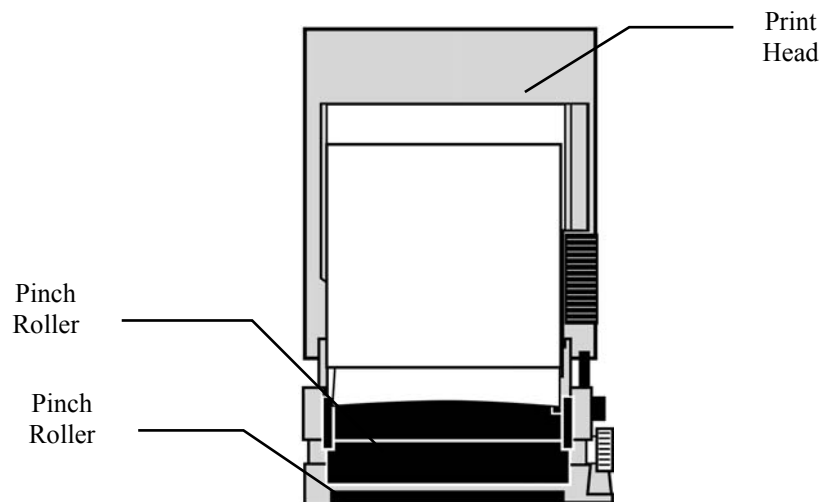

6. Hold the paper against the pinch roller and close the door.


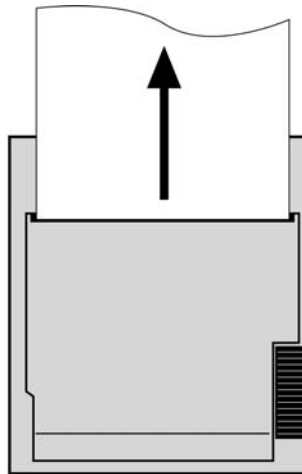


Recorder Modes

Use the following procedure to select the printing mode to be used. Selections are DIRECT, TIMED and DELAY.

The print mode is indicated in the left center of the display.

1. Press the [SETUP] key from the main menu. .
2. Press the programmable key [REC MODE] to select printing mode.

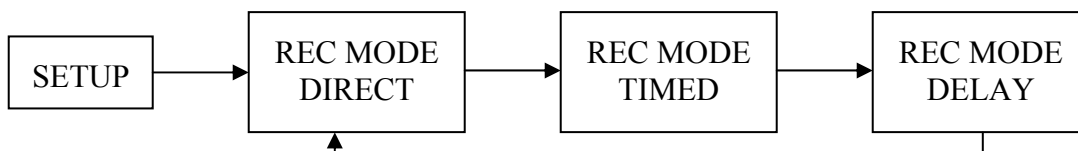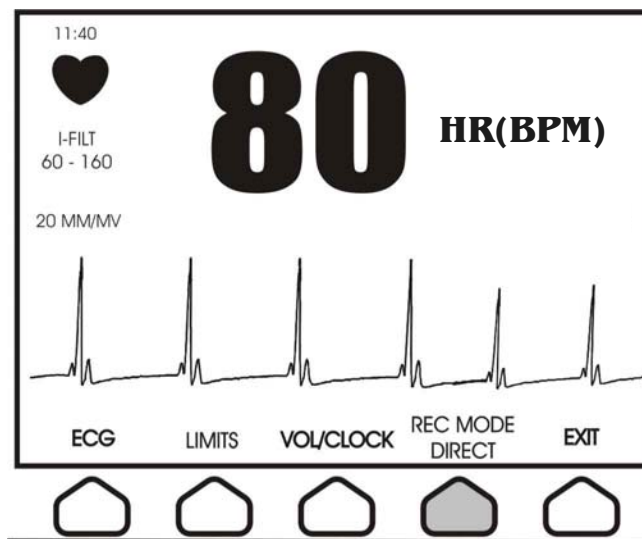

RECORDER OPERATION

Direct To print in direct, press the [PRINT] key. Press [PRINT] again to stop printing.

The plot is preceded by a header which contains all parameter readings and the time/date.

The speed of the plot and vertical resolution are the same as the display. The plot is labeled with the speed of the plot in mm/s, the recorder mode, and the parameters.

Timed TIMED mode starts by pressing [PRINT] and prints for 30 seconds.

Delay Delay mode plots 30 or 40 seconds of ECG waveform after the occurrence of an alarm condition or if print button is pushed depending on the speed selected:

15 seconds before and 15 seconds after at 50mm/s

20 seconds before and 20 seconds after at 25mm/s


Recorder Speed

Use the following procedure to change the recorder speed.

1. Press the [SPEED] key in the main menu to select the trace speed. Selections are 25, and 50 mm/s.

NOTE: The [SPEED] key also changes the speed of the ECG trace.
--

Example Printout

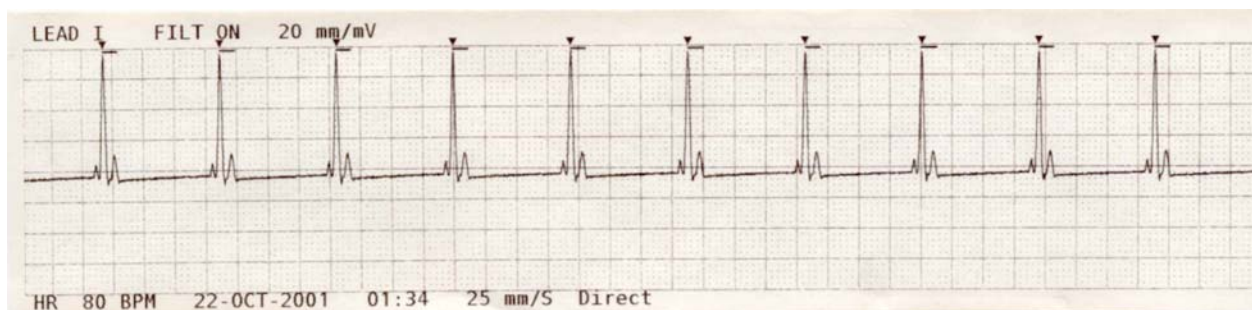


SYNCHRONIZED OUTPUT (Trigger)

The Synch Pulse

The ECG Synchronized Output produces a trigger pulse starting at the peak of each R-wave, which is available on the **SYNCHRONIZED OUTPUT** BNC connector and on the **ECG X1000** (ECGX500 for GEMS Nuclear Medicine Applications) output connector, ring on the 1/4" stereo jack, on the rear panel of the monitor. Connect the Synchronized Output from the monitor to the device being synchronized.

The following shows the timing of the trigger pulse compared to the ECG waveform.

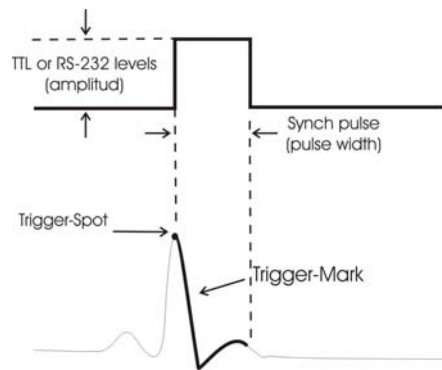

Trigger pulse width options			
1ms	50ms	100ms	150ms
GEMS ISRAEL ELGEMS		ELSCINT MARCONI PHILIPS SIEMENS SMV TOSHIBA	ADAC IMATRON IVY

Trigger pulse amplitude options			
0V to 5V Positive Edge	5V to 0 V Negative Edge	-11V to +11V	0V to 4.2V
ADAC ELSCINT IMATRON IVY MARCONI PHILIPS SIEMENS SMV TOSHIBA	ELSCINT PHILIPS SIEMENS	ELGEMS GEMS ISRAEL	SPECIAL ORDER HIGH CURRENT OPTION

Trigger- Mark Display

The Synchronized trigger output is always active. A portion of the ECG waveform corresponding to the timing of the synch pulse is highlighted in red.

If the trigger function appears to be erratic verify the following:

- Select lead with the highest amplitude, typically Lead II.
- The proper placement of the ECG electrodes. The ECG electrodes may need to be repositioned.
- The ECG electrodes still have conductive gel.

SYNCHRONIZED OUTPUT

Trigger Polarity Control (available for some OEM customers)

The trigger polarity control allows the user to change the polarity of the trigger pulse to either positive edge (0V to 5V) or negative edge (5V to 0V).

Use the following procedure to set the polarity of the trigger pulse:

1. Press the [SETUP] key in the main menu.
2. Press the [ECG] key to access the ECG menu.
3. Press the [OPTIONS] key.
4. Press the [TRIGGER] key to toggle through the different trigger options (TRIGGER POSITIVE and TRIGGER NEGATIVE).
5. Press [EXIT] to return to the main menu.

NOTE:

1. Each time the monitor power is turned on a flashing message will be displayed (bottom left corner of the display) for one minute to indicate the status of the trigger pulse.
2. Each time the trigger pulse polarity is changed, a flashing message will be displayed (bottom left corner of the display) for one minute to indicate the status of the trigger pulse.

MONITOR TESTING

Press the [TEST] key to test the internal functions of the monitor. You should do this each time you begin monitoring a patient.

The [TEST] function generates a 1 mV pulse at 70 bpm, causing a waveform and a 70 bpm indication on the display and a signal at the rear panel connector. If these indications are not present, contact qualified service personnel.

To test the visual and audio alarms turn on the monitor. Make sure the ALARMS OFF message is not present in the

center portion of the display. If the alarms are off press the  key. Unplug the patient cable. Check that the LEAD OFF message is displayed on the ECG channel and the audio alarm is on. While pressing the TEST key check for the following to happen: 1) LEAD OFF message disappear, and 2) Monitor starts counting QRS. Stop

pressing the TEST key and press  for three seconds, the message PAUSE and the timer should be displayed on the display, all audio and visual alarms should be off

Under normal operation, no internal adjustment or recalibration is required. Safety tests and internal adjustments should be done by qualified personnel only. Safety checks should be performed at regular intervals or in accordance with local or governmental regulations. In the event that internal adjustment or recalibration is necessary, refer to the Operation and Service Manual for this equipment.

Note:

If no display is visible on the monitor, the monitor is inoperable, contact qualified personal. When the patients ECG signal amplitude input is >0.5 V, an inoperable condition is indicated by a flashing LEAD OFF indicator on the display.

ECG Simulator (Optional)

The model 3000 can have an optional integrated simulator that is used to verify the integrity of the patient cable, lead wires and electronic circuits involved in the processing of the patient's ECG signal.

The simulator terminals are located in the right side panel of the monitor and have three color coded labels for easy identification. The terminals are used to attach the lead wires. The simulator generates a simulated ECG waveform and heart rate within 40-150bpm range (user selectable). When the simulator is on, a message "SIMULATOR ON" is displayed in the center of the screen below the ECG trace.

ECG Simulator operation

To turn the simulator on and set the heart rate, follow the procedure below:

1. Press the [TEST MODE] key located in the main menu to access the simulator mode menu.
2. Press the key [SIM RATE] to turn the simulator on and toggle through the heart rate options.
3. Press the keys [$\uparrow$ FINE TUNE $\downarrow$] to change the heart rate in increments of one bpm.
4. Press [EXIT] to exit the test mode menu.

NOTE: When the simulator is on, a message "SIMULATOR ON" is displayed in the center of the screen below the ECG trace.

MAINTENANCE AND CLEANING

MAINTENANCE AND CLEANING

The Monitor

When necessary, clean the exterior surfaces of the monitor with a cloth or swab dampened with a warm water and mild detergent solution. Do not allow liquids to enter the interior of the instrument.

CAUTION:

- Do not autoclave, pressure sterilize, or gas sterilize the monitor.
- Do not soak or immerse in any liquid.
- Use cleaning solution sparingly. Excessive solution can flow into the monitor and cause damage to internal components.
- Do not touch, press or rub the display and covers with abrasive cleaning compounds, instruments, brushes, rough surface materials, or bring them into contact with anything that could scratch the display or the covers.
- Do not use petroleum based or acetones solutions, or other harsh solvents, to clean the monitor.

Patient Cables

Do not autoclave the patient cables.

Wipe the cables using a mild detergent solution. Never submerge the cables in any liquid or allow liquids to enter the electrical connections.

Preventive Maintenance

ECG

Check before connecting the monitor to a new patient that:

- Cables and Leads are clean and intact.
- The LEAD OFF message is displayed when the patient cable is connected, but the patient leads are not connected. Connecting the patient leads together should make the message disappear.
- The BNC Interconnect cable is clean and intact.

NOTE: There are no user serviceable items contained in the model 3000.
--

ACCESSORIES

ECG

3 Lead Patient Cable	590161
Set of 3 leads (Colors: Red, Black, and White)	590162
Low noise 3 Lead ECG Patient Cable (For CT Scanner customers only)	590317
Set of three radiotranslucent lead wires (For CT Scanner customers only)	590318
BNC Interconnect Cable Assembly (8 ft long)	1564-01-10
Box of 10 rolls of recorder paper	590035
Fuse, ½ ASB (5x20mm) 100-230V	290017
Cord set, Hospital Grade	610007
Jumper Cord	610012
SSE pre-gel Radiotransparent ECG electrodes	590290

To order accessories please contact customer service:

- Tele: (800) 247-4614 ext 106
- Tele: (203) 481-4183 ext 106
- Fax: (203) 481-8734
- E-mail: ivysales@ivybiomedical.com

Disposal

Disposal of devices or consumables must be done in accordance with local, state, and federal laws and regulations.

WEEE Directive 2002/96/EC.- Do not dispose of WEEE products in general waste. At the end of life of product contact IVY Biomedical Systems, Inc. customer service for return instructions.

SPECIFICATIONS

Specifications

ECG

Lead Selection:	LI, LII, LIII menu selectable.
Patient Cable:	6-Pin AAMI Standard connector
Isolation:	Isolated from ground related circuits by >4 kV rms, 5.5 kV peak
CMRR:	≥90 dB with patient cable and 51 kΩ/47 nF imbalance
Input Impedance:	≥20 MΩ at 10 Hz with patient cable
Frequency Response LCD:	Filtered: 0.5 to 25 Hz Unfiltered: 0.5 to 45 Hz
Frequency Response X1000 output:	Filtered: 0.5 to 25 Hz Unfiltered: 0.2 to 100 Hz
Input Bias Current:	Any lead configuration <200 nA dc maximum
Electrode Offset Potential:	±0.5 V DC
Lead Off sensing current:	56nA
Noise:	<20 μV peak-to-peak, referred to the input with all leads connected through 51 kΩ/47 nF to ground
Defibrillator Protection:	Protected against 360 J discharge and electrosurgery potentials Recovery time <6s
Leakage Current:	<10 μA at normal condition
Electrosurgical Interference Protection:	Standard. Recovery time: <6 seconds.
Notch Filter:	50/60 Hz (automatic).

Cardiotach

Range:	15 to 300 bpm
Accuracy:	±1%
Resolution:	1 bpm
Sensitivity:	300 μV peak
Heart Rate Averaging:	Exponential averaging calculated once a second with a maximum response time of 8 seconds.
Response Time:	≤ 8 seconds
Tall T Wave Rejection:	Rejects T waves ≤R wave

Pacer Pulse Rejection

Width:	0.1 to 2 ms at ± 2 to ± 700 mV
Overshoot:	Between 4 to 100ms and not greater than 2mV.
Fast ECG signals:	2mV/100 μ s.
Detector disabling:	None.

NOTE: Pacemaker pulses are not present in any rear panel outputs.

Alarms

High Rate:	15 to 250 bpm in 5 bpm increments
Low Rate:	10 to 245 bpm in 5 bpm increments
Asystole:	R to R interval >6 seconds
Lead Off:	Detached lead or offset potential >0.5 V

Test Mode

ECG:	1 mV/100 ms @ 70 bpm
------	----------------------

Display

Type:	Active Matrix TFT Color LCD (640x480)
Trace:	Single ECG trace with "freeze" function.
Screen Size:	13.25cm x 9.94cm, 16.5cm (6.5in)diagonal
Sweep Speed:	25, 50 mm/s
Aspect ratio:	0.4 (standard). User selectable.

Mechanical

Size:	Height: 6.70in. (17.2cm) Width: 9.25in. (33.5cm) Depth: 9.21in. (23.4cm)
Weight:	6.5lbs (2.9kg)

Recorder (optional)

Writing Method:	Direct Thermal
Number of Traces:	1
Modes:	Direct - Manual Recording Timed - Print button initiates a 30 second recording Delay - Recorder is activated by an alarm
Paper Speeds:	25 and 50 mm/s
Resolution:	Vertical - 200 dots/in. Horizontal - 600 dots/in. at ≤ 25 mm/s 400 dots/in. at > 25 mm/s
Frequency Response:	> 100 Hz at 50 mm/s
Data Rate:	400 samples/s/trace

SPECIFICATIONS

Synchronized Output (Trigger)

Phase Delay from Electrode Leads to Trigger Output:	< 3 ms
R to R Trigger Accuracy:	$\pm 50\mu\text{s}$ typical @ 1 mV input
Pulse width:	1 to 150ms (standard 150ms)
Pulse amplitude:	0 to 5V, 5 to 0V, -11 to 11V
Output Impedance:	<100 Ω
Sensitivity and Threshold Adjustment:	Fully Automatic
Polarity control:	Positive edge or Negative edge.
Output connectors:	ECG X1000 (ECG X500 for GEMS) – Ring BNC connector RS232

Real Time Clock

Resolution:	1 minute
Display:	24 hours
Power Requirement:	The real time clock keeps time if the monitor has power or not. The clock is powered by a dedicated battery whose life is minimum 4 years at a temperature of 25°C

Environmental

Operating Temperature Range:	5°C to 35°C
Storage Temperature Range:	-5°C to 60°C
Relative Humidity:	0-90% non-condensing
Atmospheric Pressure:	500-1060 mbar

Power Requirements

Voltage Input:	100 to 230V~
Line Frequency:	47 to 63 Hz
Fuses Type and Rating:	T.5A, 250V (Metric 5x20mm)
Maximum ac Power Consumption:	35 VA

Regulatory

Unit meets or exceeds the specifications for the AAMI Cardiac Monitor Standard EC-13, UL2601-1, CAN/CSA C22.2 No 601.1-M90, CDN MDR (CMDCAS), IEC 60601-2-25, IEC 60601-2-27, MDD.93/42/EEC, CE 0143, ISO 13485:1996, and FDA/CGMP.